


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291


Modern German Schutzenpanzer PUMA in UAE Basic

现代德国 美洲狮 步兵战车阿联酋版改造件

[For RFM 5107]

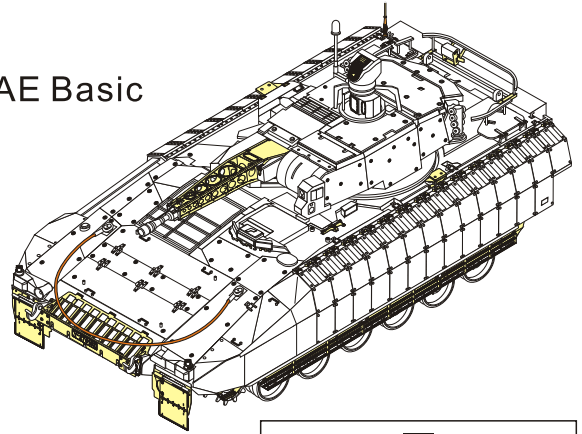

■ 推荐使用工具 RECOMMENDED TOOLS

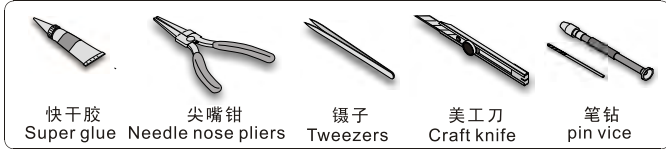

- 安装
install
- 折叠
bend
- A1**

改造件零件编号
PE/resin part number
- B12**


原零件编号
kit part number
- C22**

被替换的原零件编号
replaced kit part number
- 另一侧相同制作
repeat on opposite side
- 切除
remove
- 打磨
grind off
- 弧度卷曲
radial bending
- x2**




制作若干组
multiple assembly
- 选择安装
alternative
- 钻孔
drill
- 用胶棒制作
make from plastic rod

用尖端在凹槽处冲压
use penpoint to press on the dent




蚀刻片零件内侧面向上
Put the part upside down
 用笔尖在凹槽处刮
Use penpoint to press on the dent

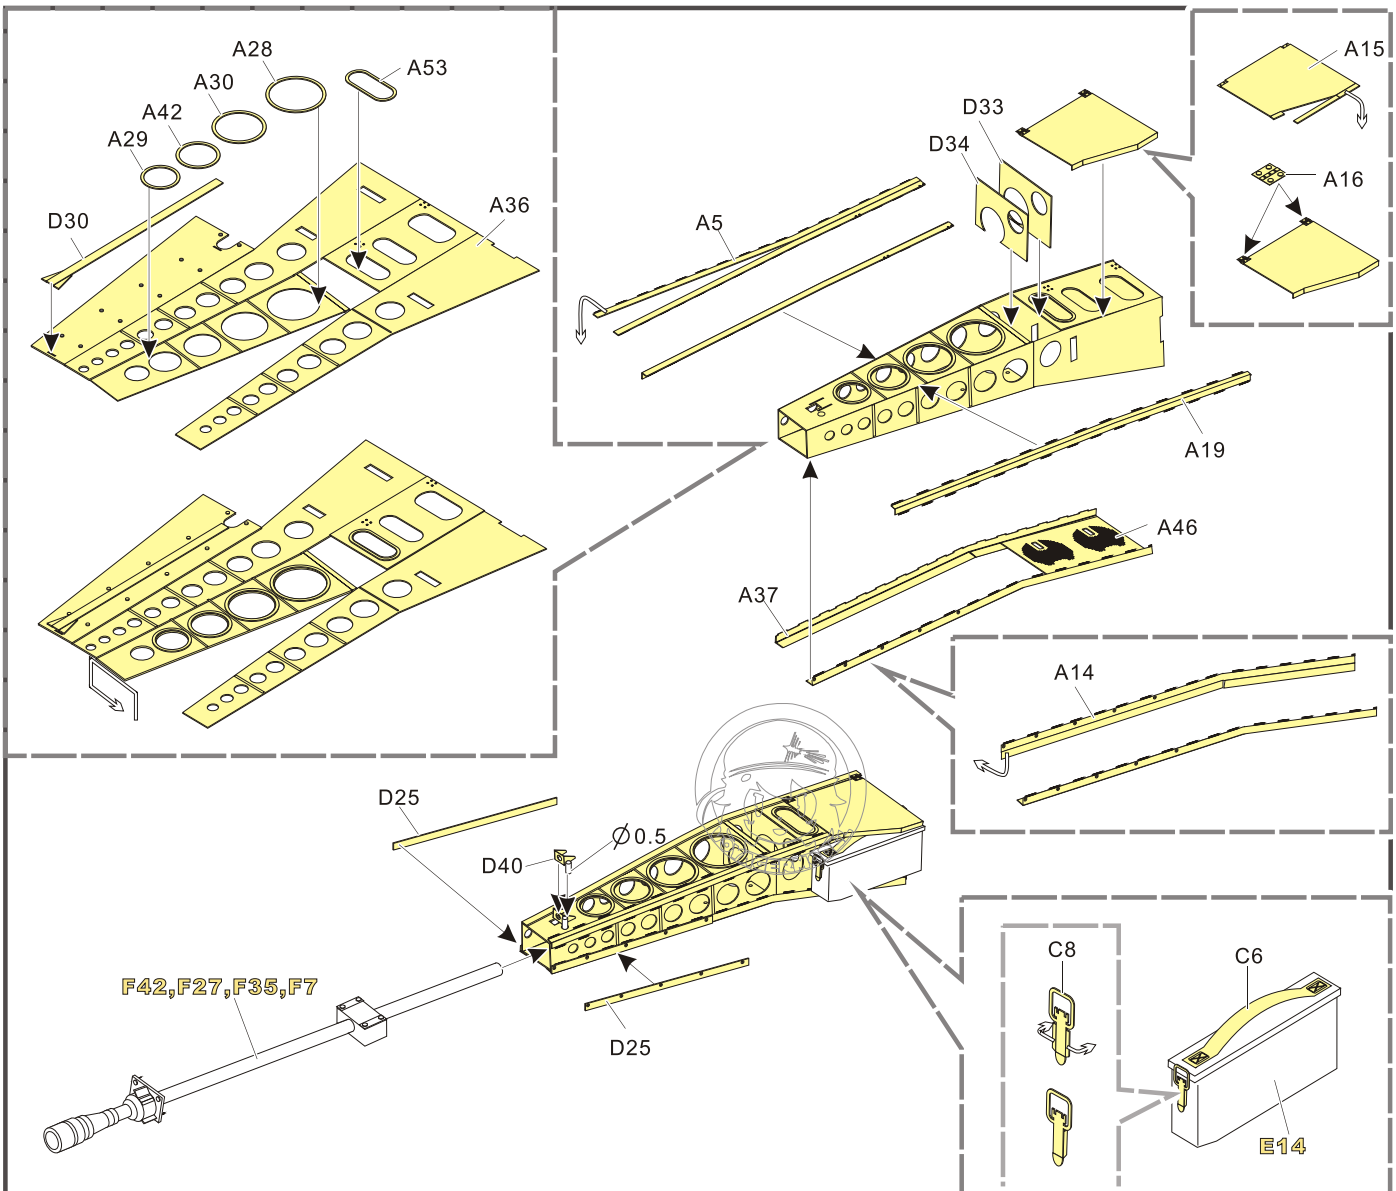





1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291

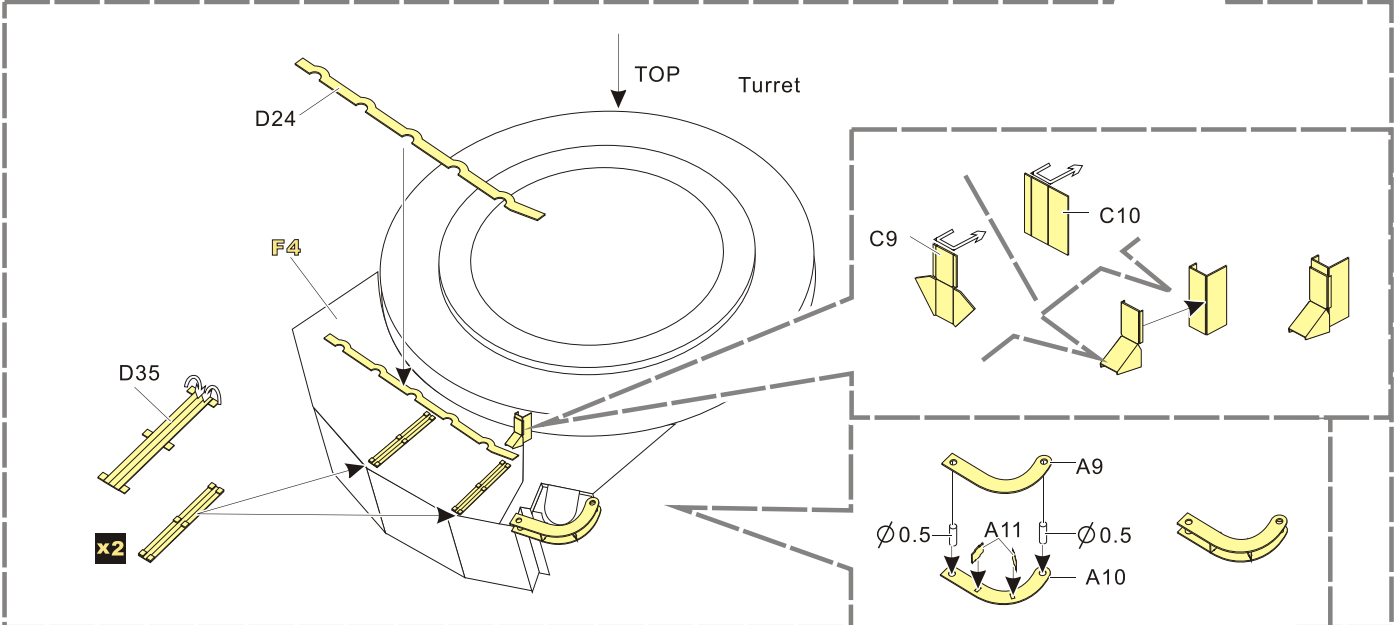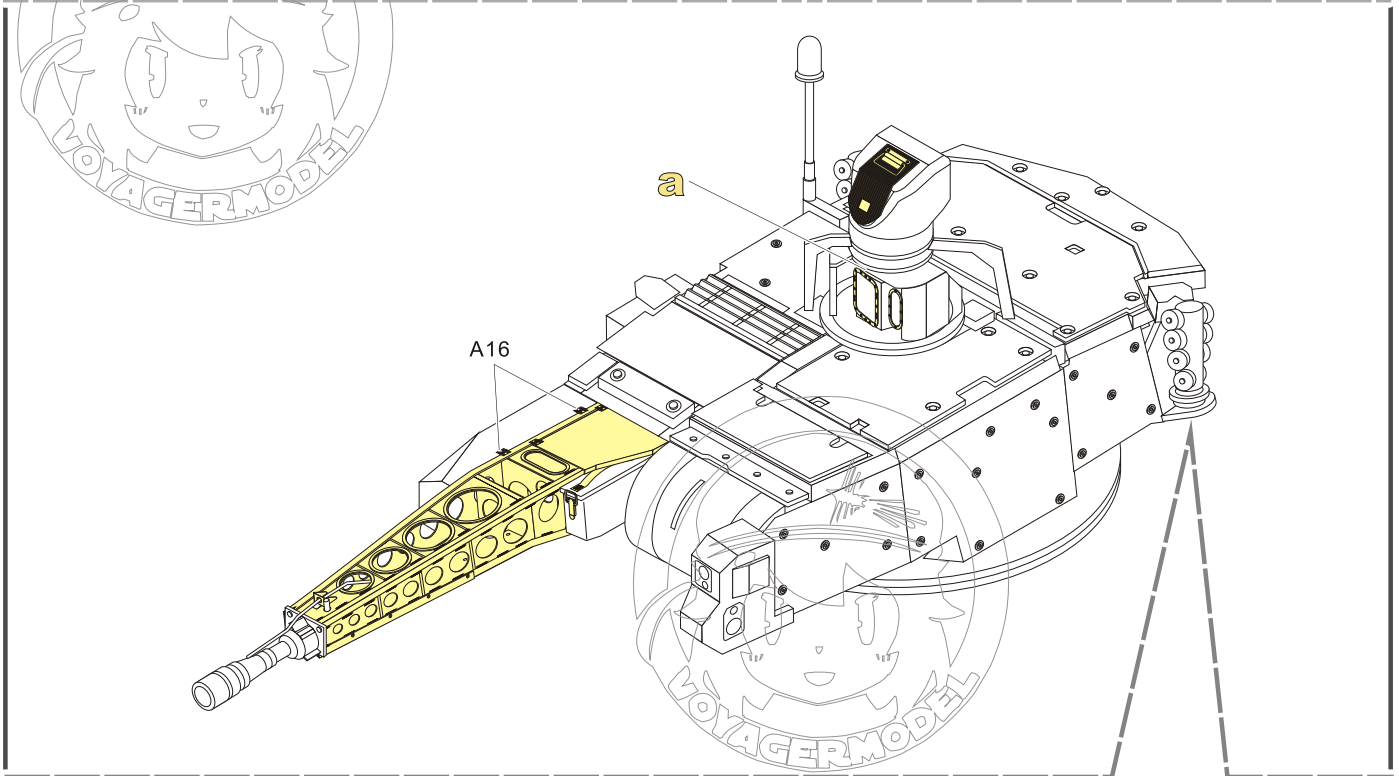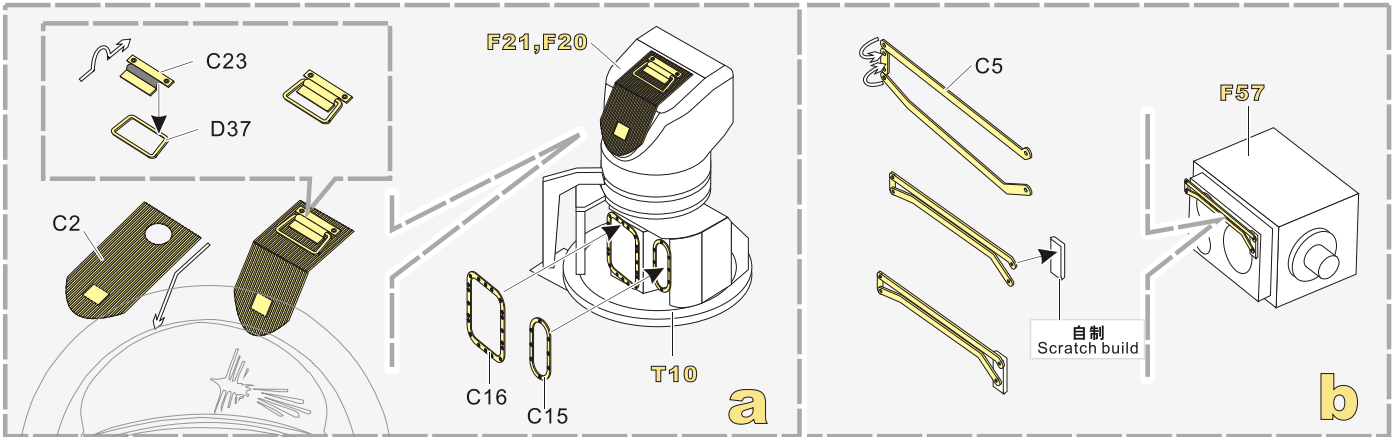



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291

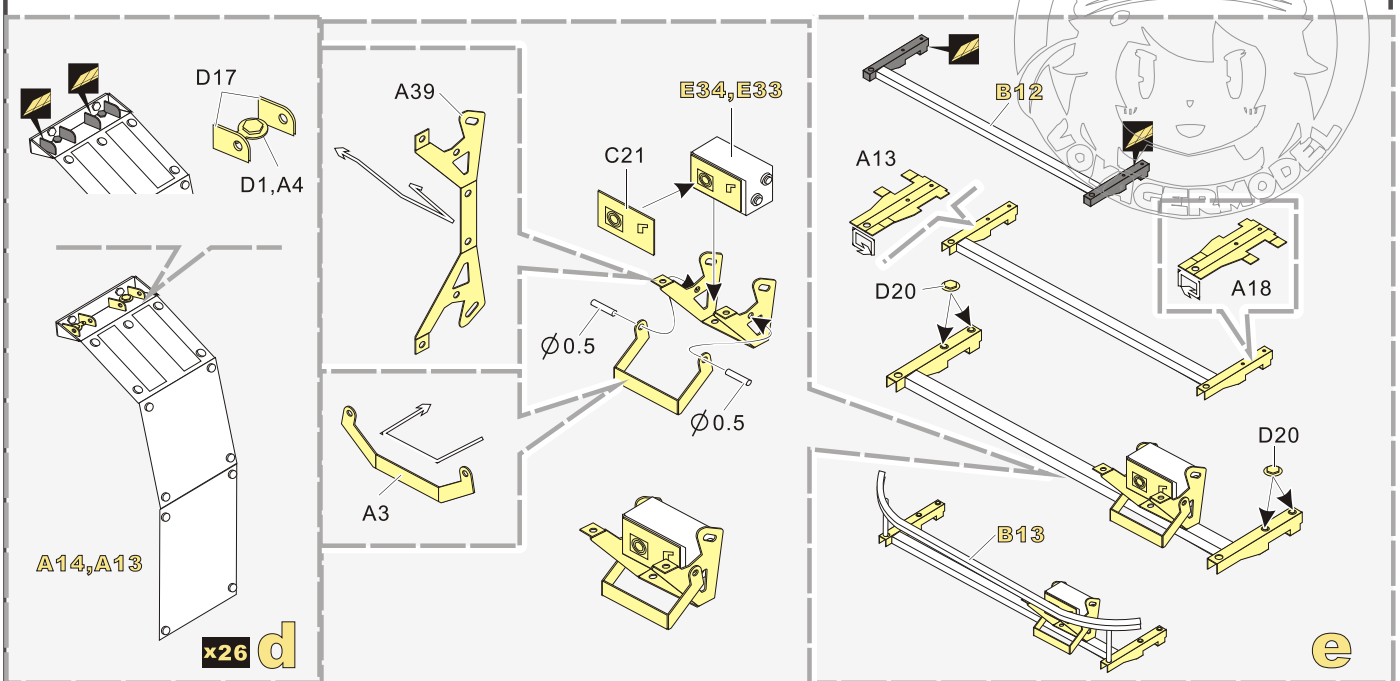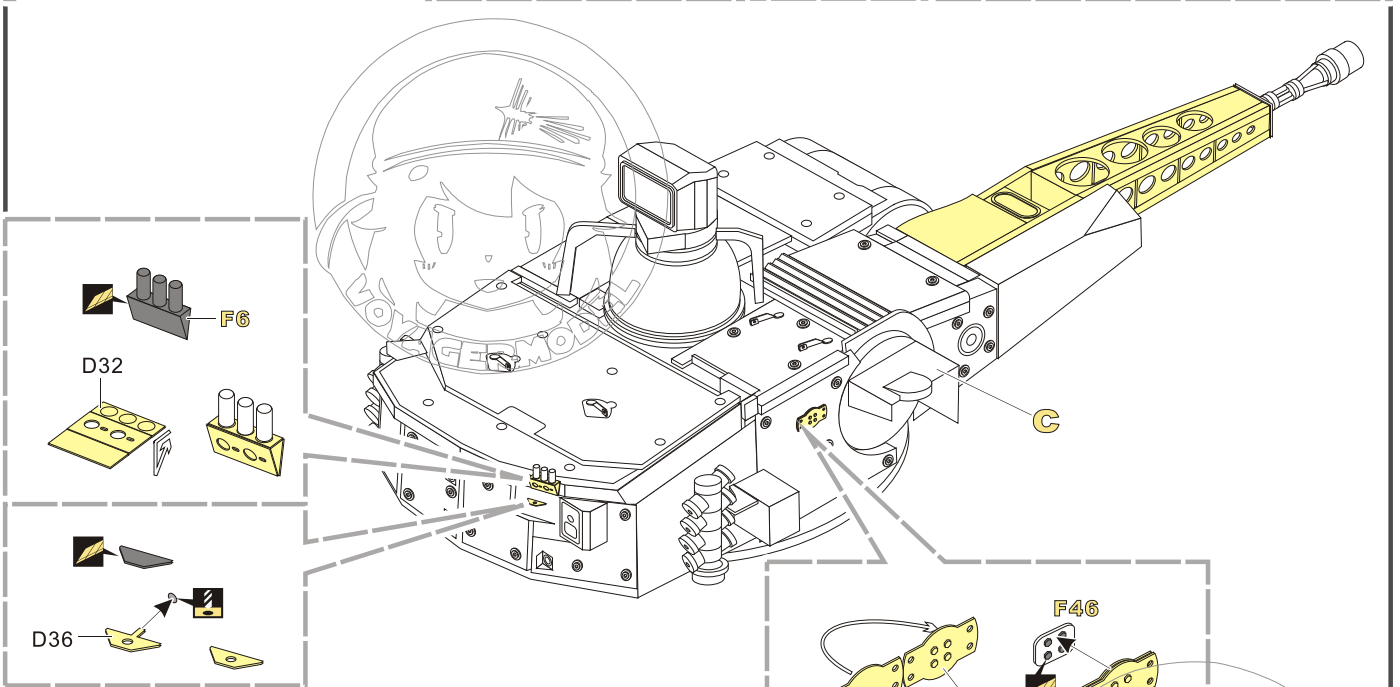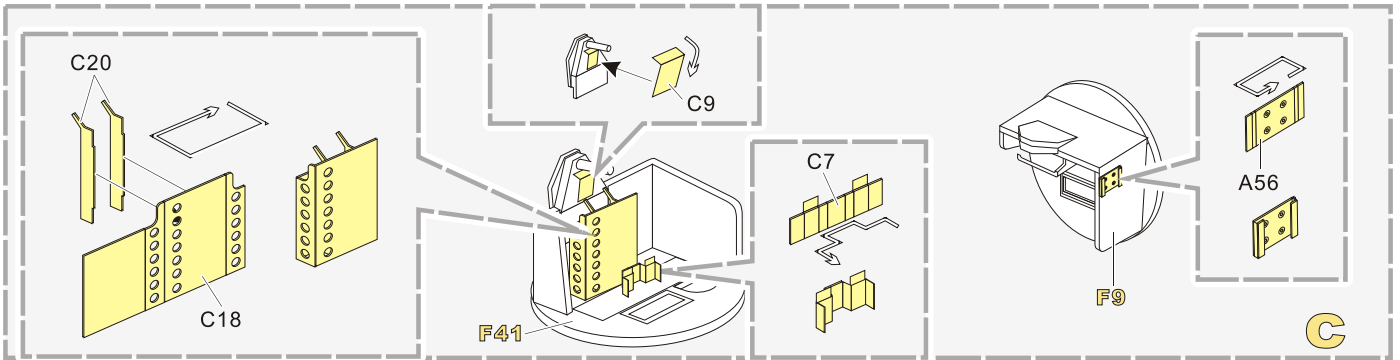



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291

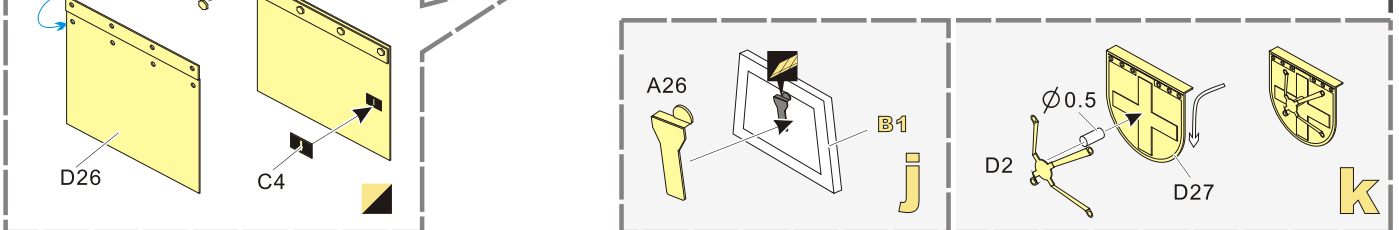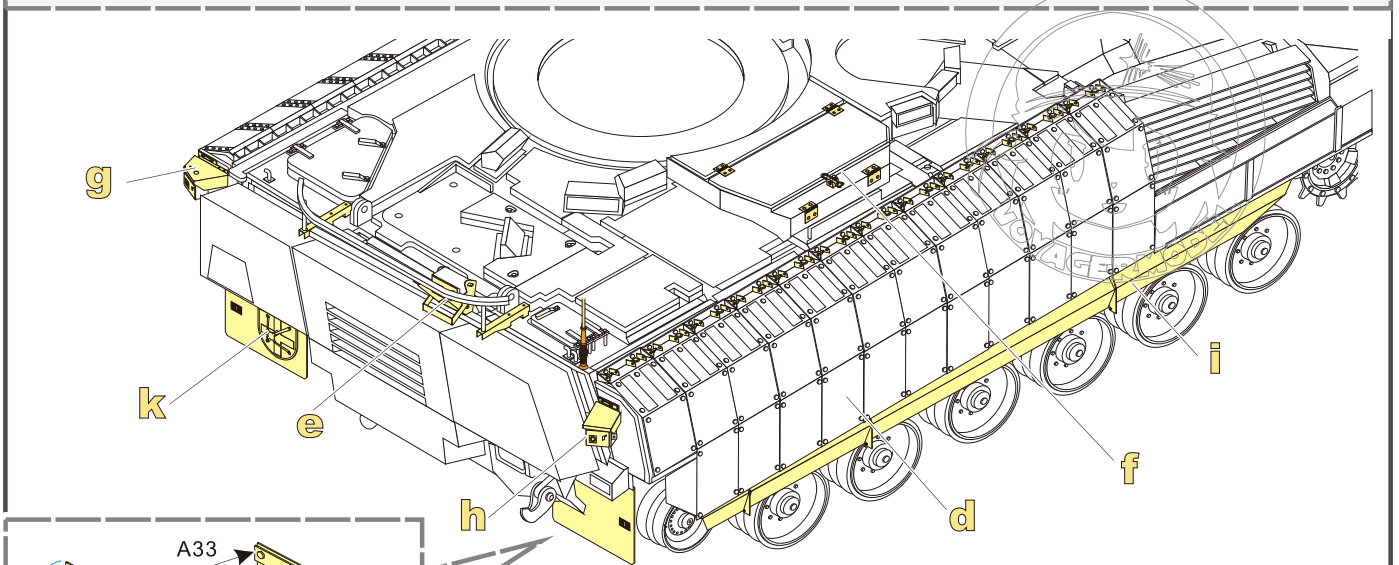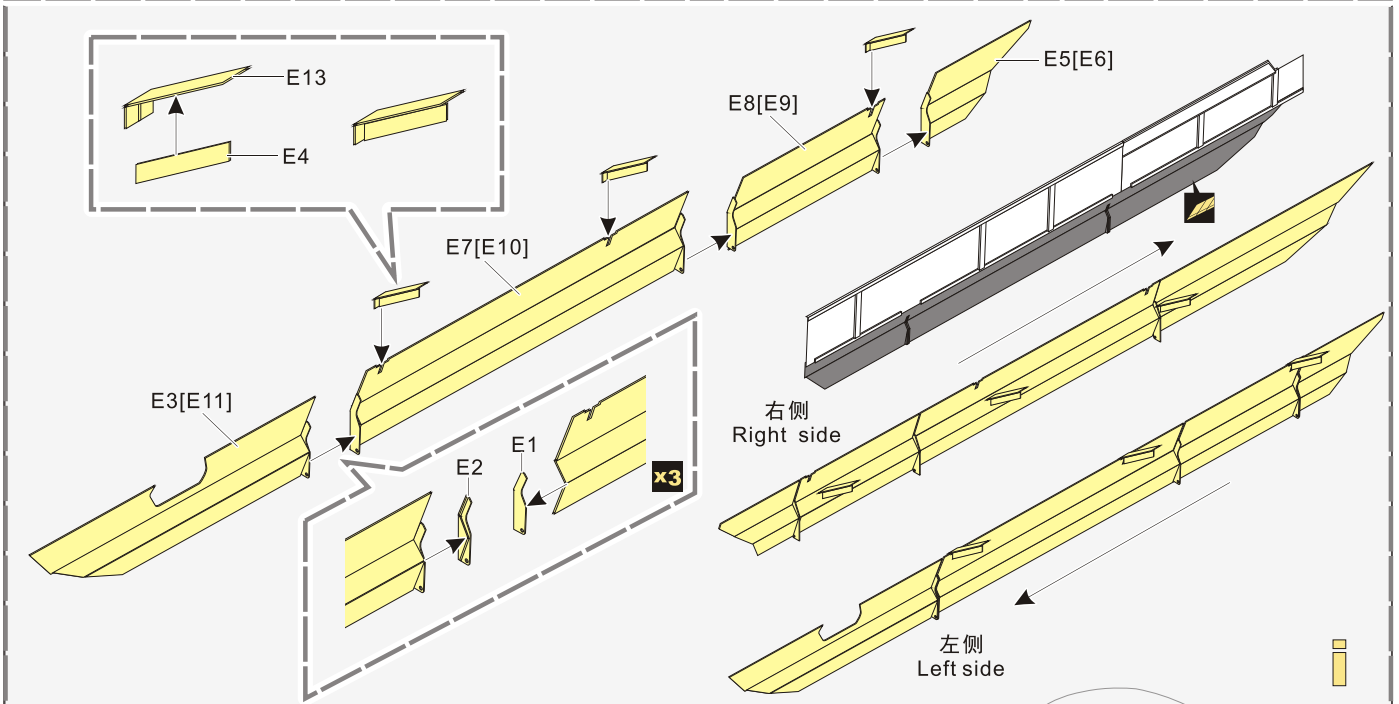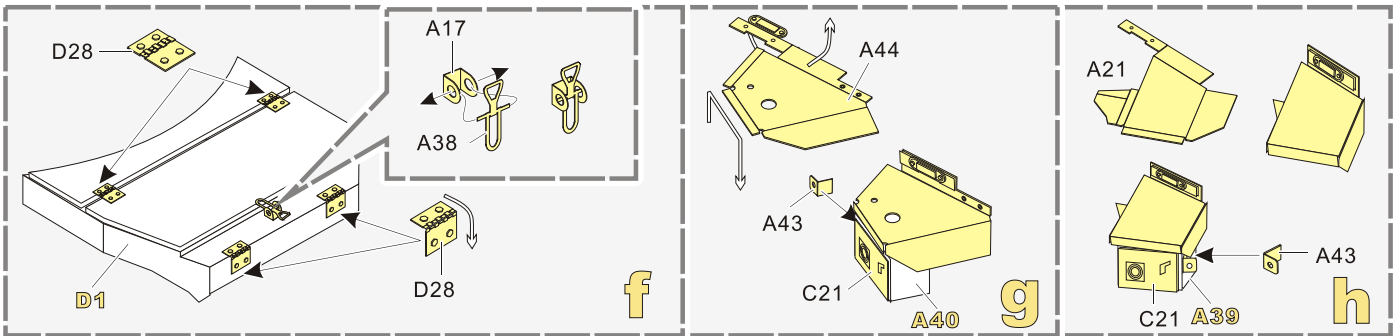


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291

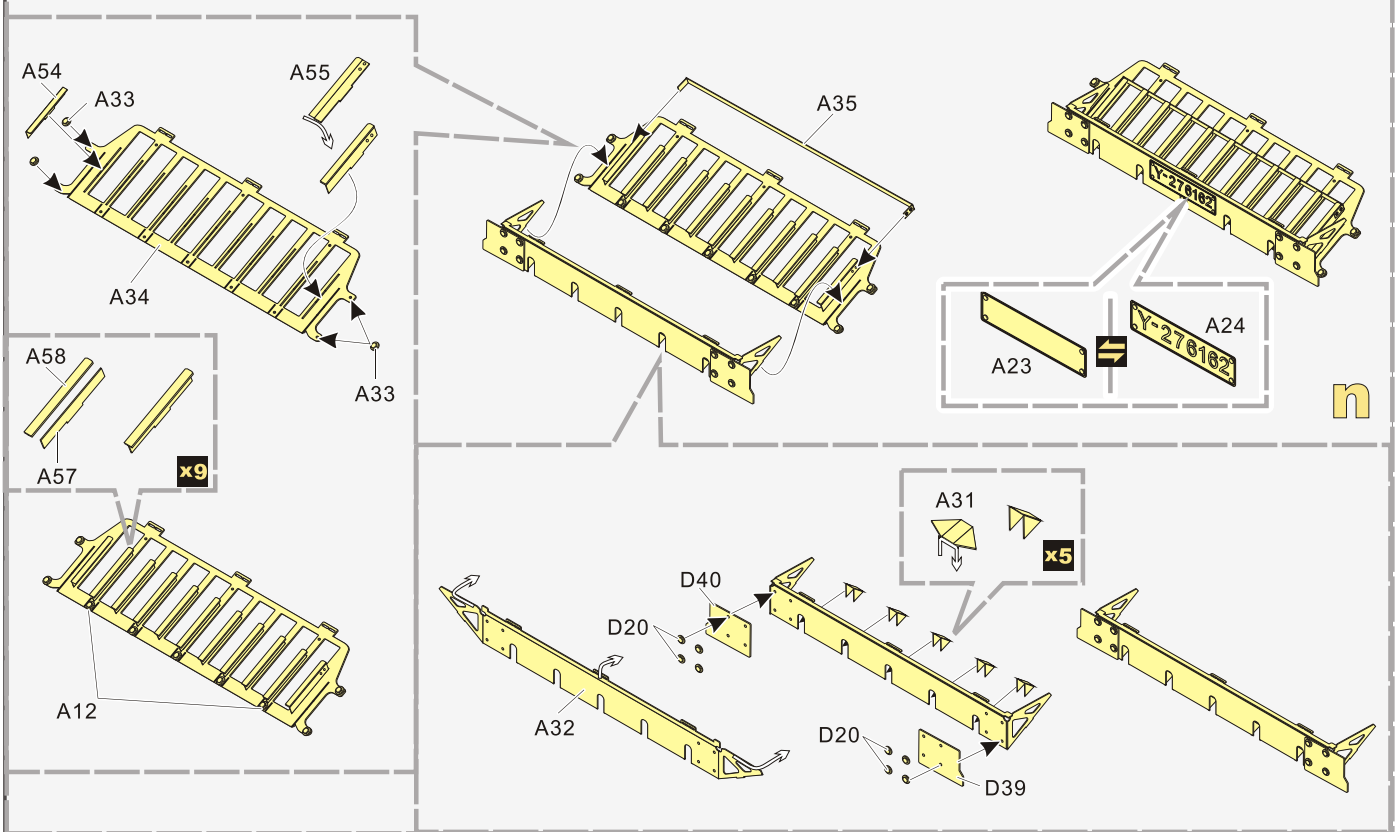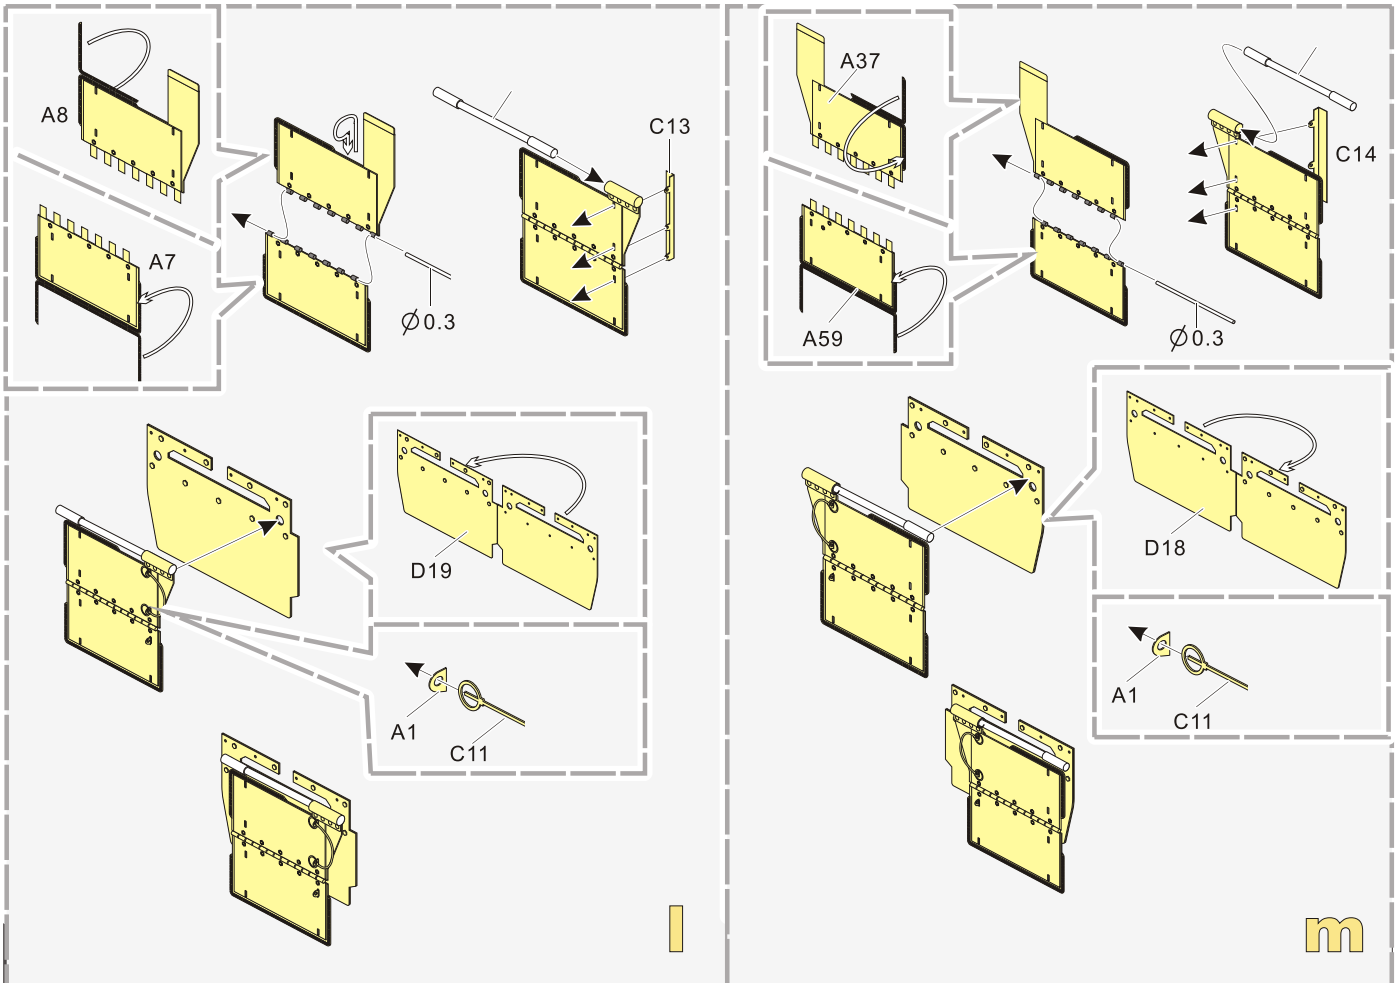


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291

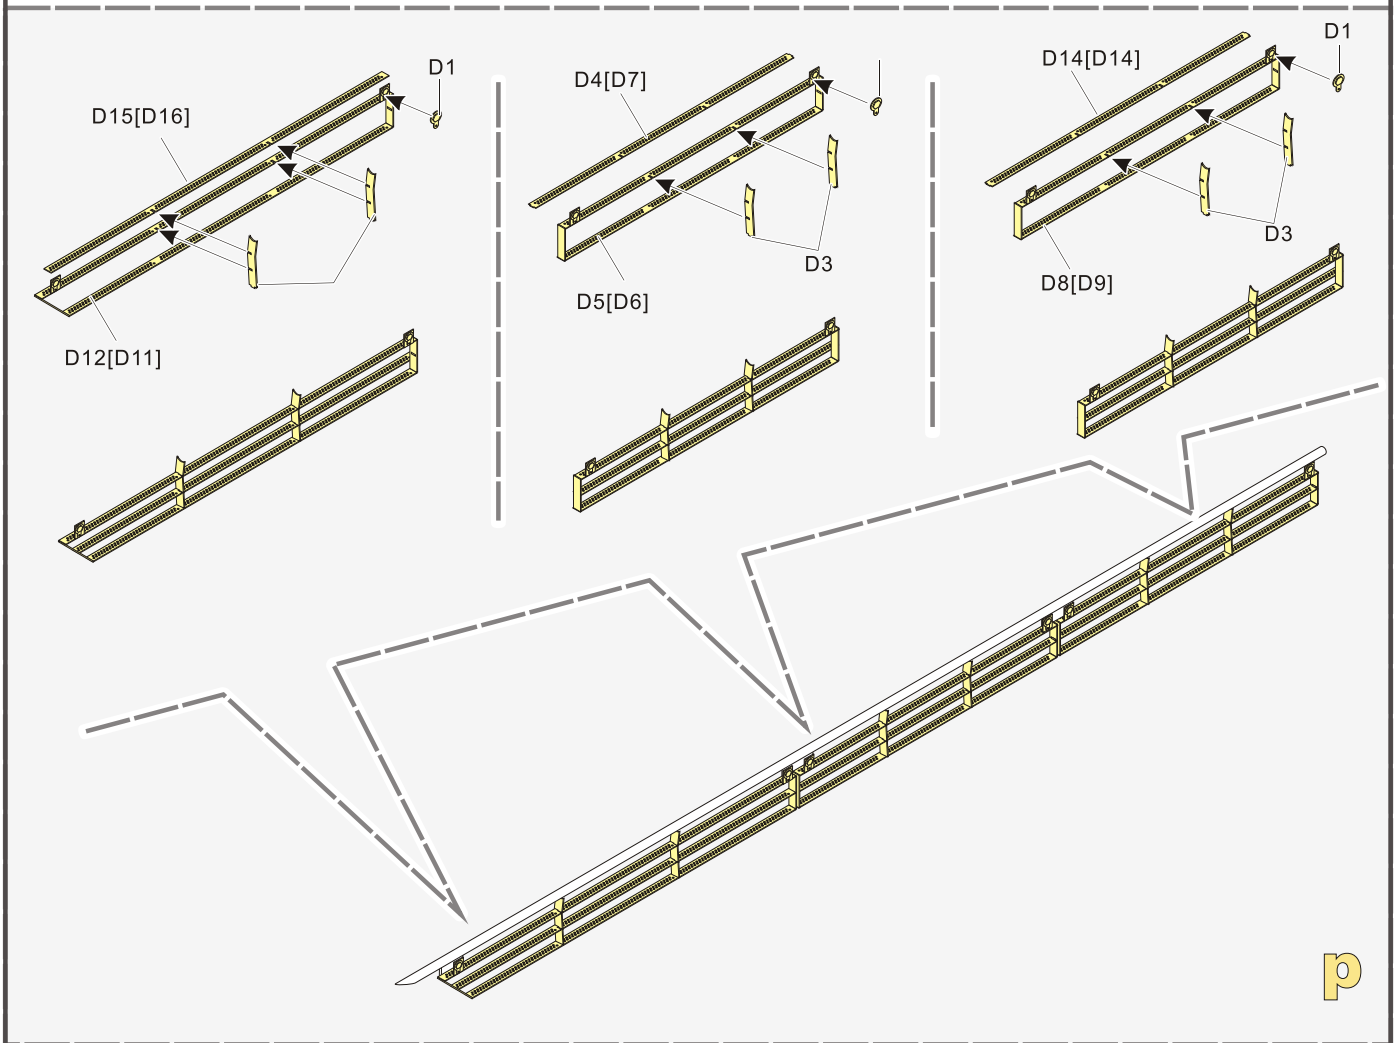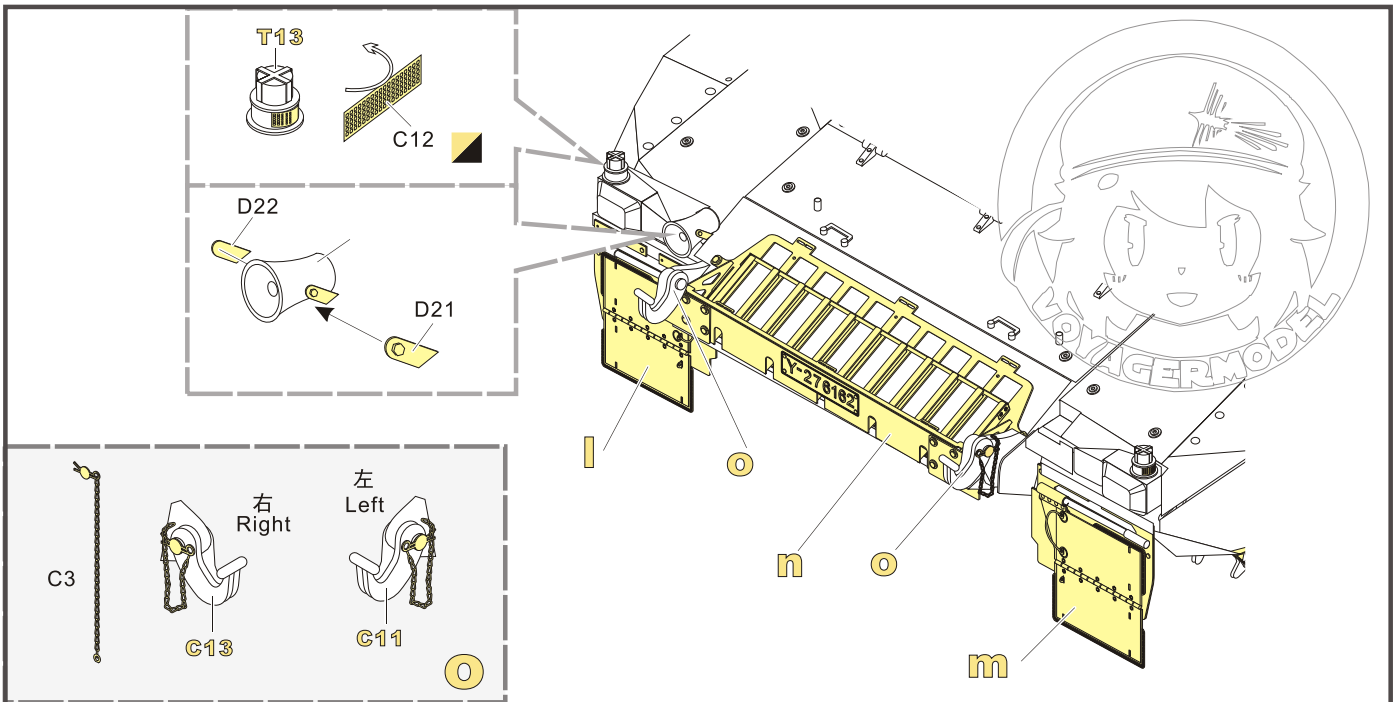

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291

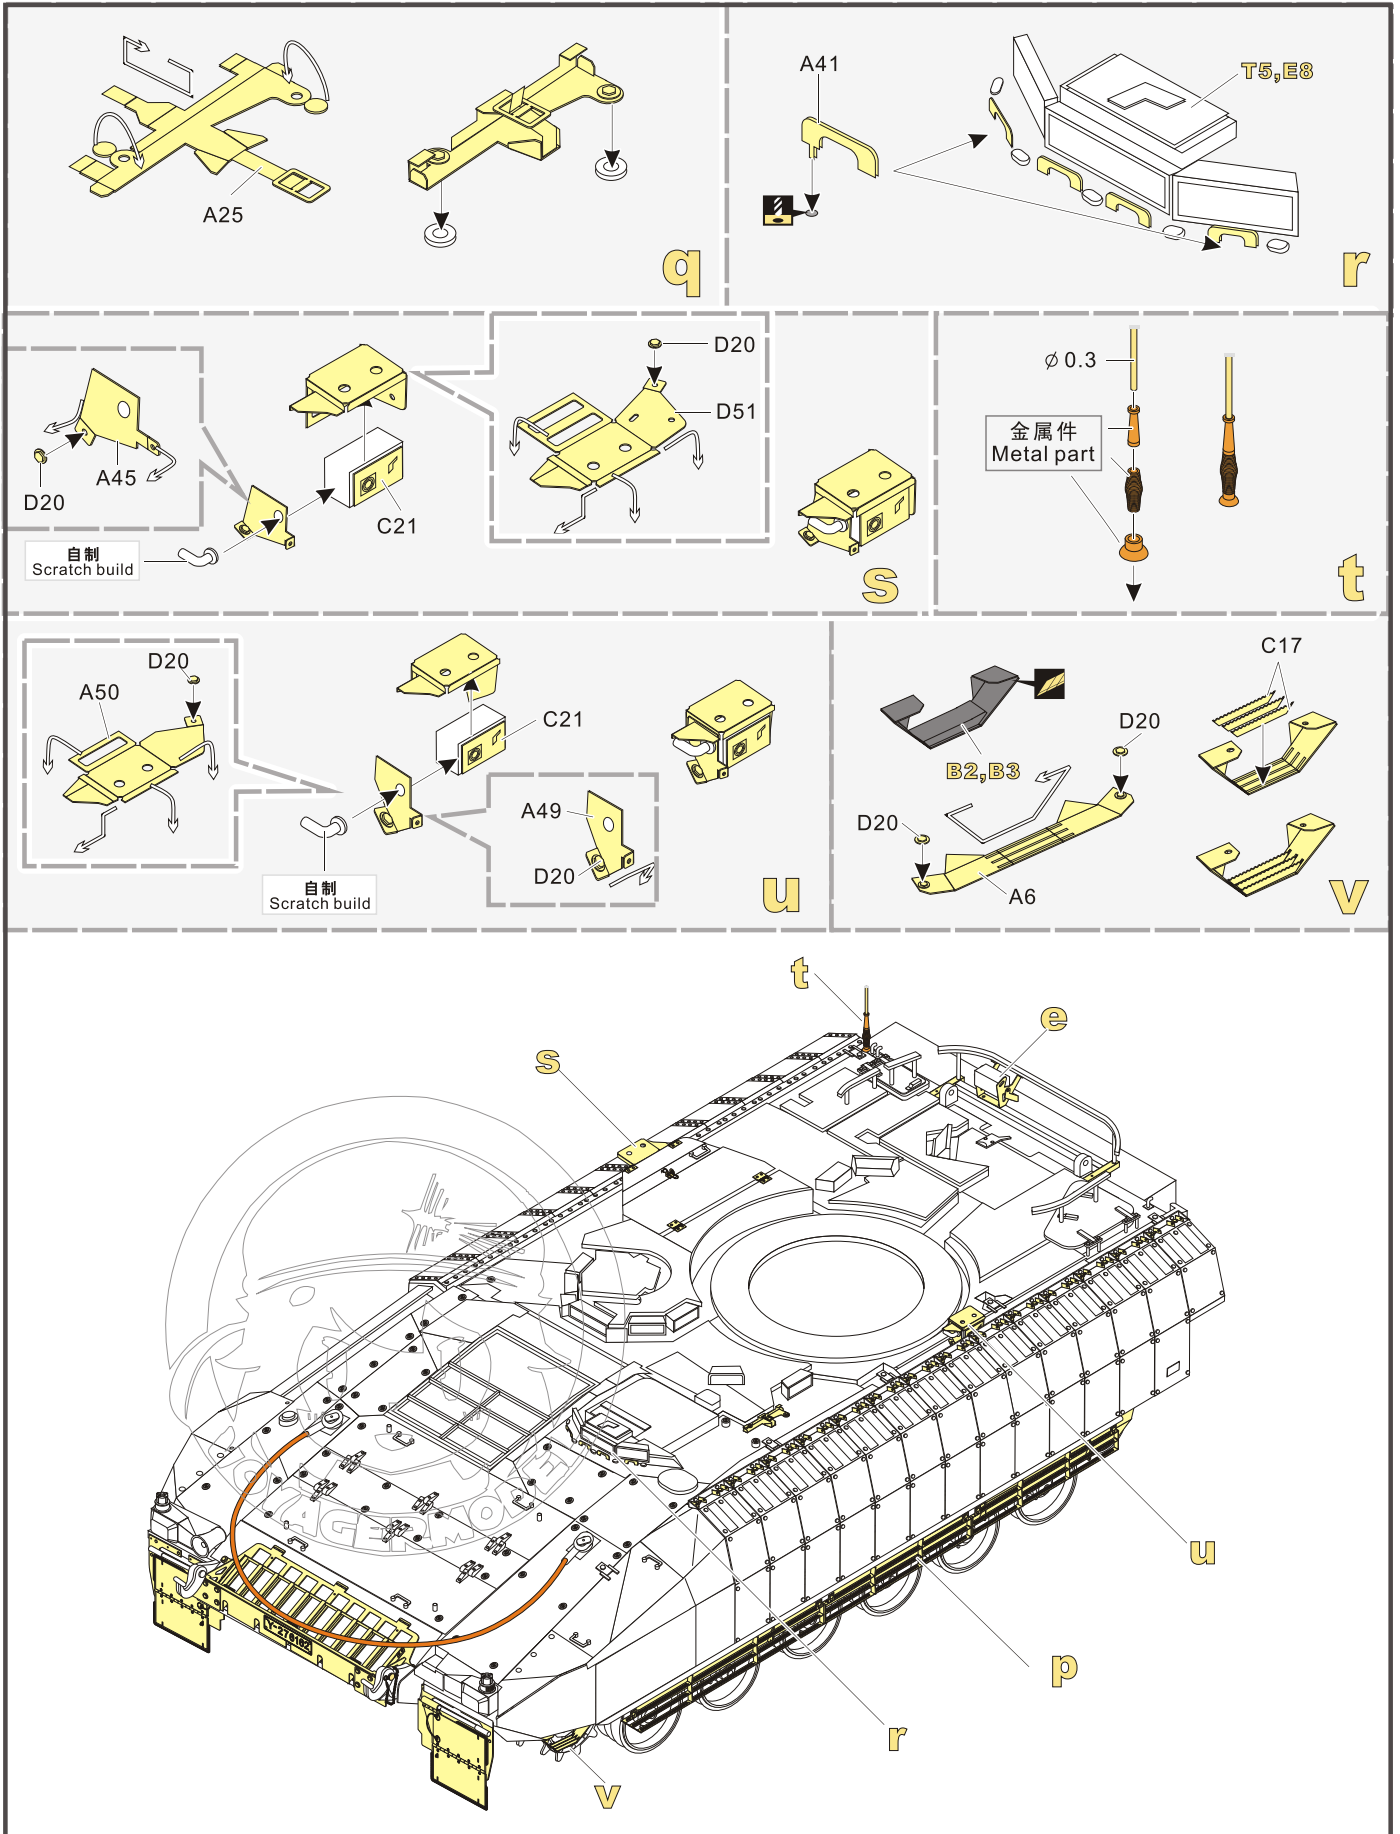

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE351291

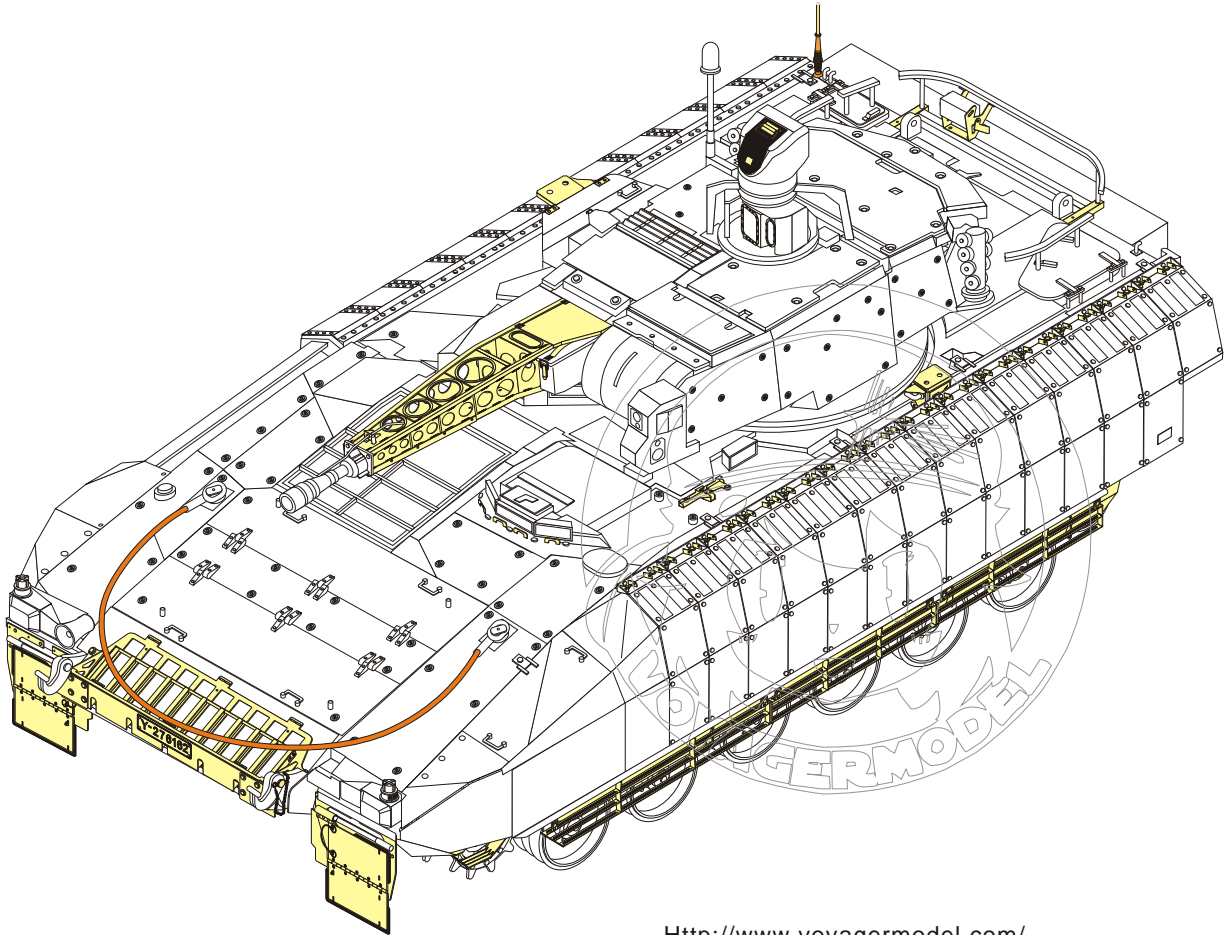

[Http://www.voyagermodel.com/productdetails.asp?itemid=PE351291](http://www.voyagermodel.com/productdetails.asp?itemid=PE351291)



**VOYAGER
MODEL**




漏喷板使用说明:
Instruction:



未上色零件
Unpainted part



喷橡胶黑
spray tyre black



C1

使用遮喷板为轮毂
喷上所需要的颜色
use template to paint
required hub colour



W



更多PE351291样品照片参考请扫一扫

MORE PICTUER OF PE 351291
REFERENCE SCAN HERE

VOYAGERMODEL® 无微不至 极尽享受

Recommended item

PE 35674	Morden German Fennek LGS-Dutch Version(Machine Gun includ)
PE 35683	Modern German MBT-70 (Gun barrel ,smoke discharger, antenna base include)
PE 35652	Modern Canadian Leopard C2 MEXAS MBT(Gun barrel ,smoke discharger include)
PE 35633	Modern German M88A1G Recovery Vehicle (smoke discharger include)
PE 35625	Modern Italian amry PUMA6X6 Armored Vehicle (smoke discharger include)
PE 35890	Modern German Leopard2A4 Revolution 1 MBT Basic
PE 35891	Modern German Leopard2 Revolution 2 MBT Basic
PE 35968	Modern German Schutzenpanzer PUMA Basic
PE 35977	Modern German Schutzenpanzer PUMA Basic
PE 35545	Modern Italian amry PUMA 4X4 Armored Vehicle
PE 35625	Modern Italian amry PUMA 6X6 Armored Vehicle (smoke discharger include)
PE 351006	Modern Canadian Leopard C2 MEXAS MBT(Gun barrel ,smoke discharger include)

VOYAGERMODEL® 无微不至 极尽享受

Recommended item

PE 35685	Modern Canadian Leopard C2 MBT (Gun barrel ,smoke discharger, antenna base include)
PE 35968	Modern German Schutzenpanzer PUMA Basic
PE 351007	Modern German Leopard 2A7 +Basic
PE 35859	Modern German Leopard 2A7 Basic
PE 35781	Morden German SpPZ2 Luchs A1 Basic
PE 35784	Modern German PzH2000 SPH w/ADD-ON Amoured basic(antenna base include)
PE 35684	Modern German Leopard1A5 MBT (Gun barrel ,smoke discharger, antenna base include)
PE 35840	Modern German Gepard A1 SPAAG Basic
PE 35841	Modern German Gepard A2 SPAAG Basic
PE 35699	Modern German PzH2000 SPH basic(antenna base include)